



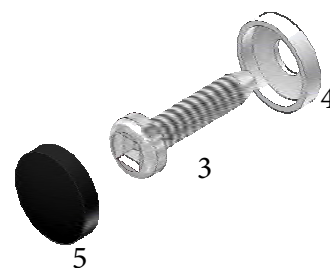


Nissan NV200 Liner Kit Installation Guide


#	QTY	Description
1	1	Driver-Side Wall Panel
2	1	Passenger-Side Wall Panel
3	16	3/4" Self-Tapping Screws
4	16	Snaps for Self-Tapping Screws
5	16	Covers for Self-Tapping Screws

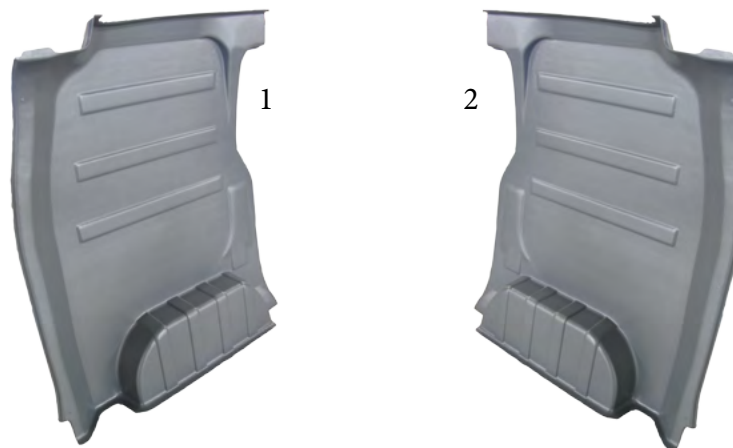

1

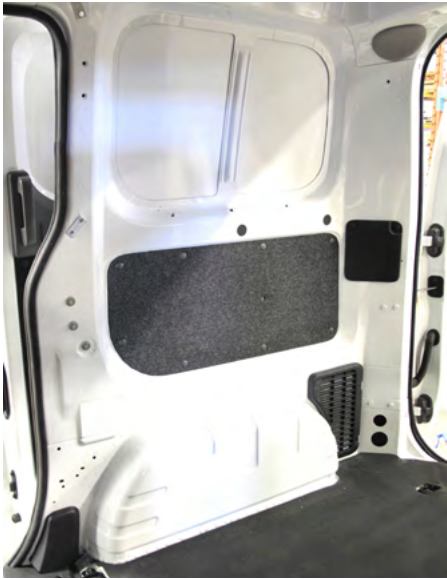

Remove plastic OEM parts [4].

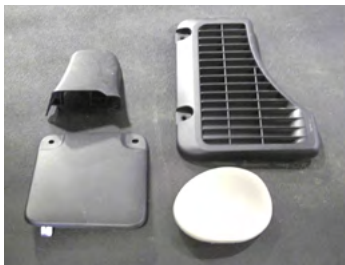

2



Pull back rubber weather stripping from rear and side doors.

3



Slide the panel in through the rear doors at an angle and position it on the wall. The panel will fit with the contour of the van.

4



Re-attach the weather stripping – cover the edge of the wall panel with it as shown.

5



Working from the bottom corner of the wall panel closest to the side door, attach the wall panel to the van using the provided self-tapping screws.

6



Don't miss the holes above the side door and in the upper corners at the rear of the van.

7



Snap on the black caps onto the screws.

8



Repeat each step for the other wall panel to complete installation.