

	TITLE:		
DOCUMENT HOLDER 6-TIER			
DOCUMENT #:	LABOR HOURS:	PRINT DATE:	
WI-DOCHLDR6	0.080	2/26/21	
REVISION:	PREPARED BY:	DATE PREPARED:	
1	V.Posa	2/2/21	
EFFECTIVE DATE:	REVIEWED BY:	DATE REVIEWED:	
2/8/2021	M.McClelland	2/8/2021	
FUNCTIONAL DEPARTMENT:	APPROVED BY:	DATE APPROVED:	
Engineering	M.McClelland	2/2/2021	

## **STANDARD WARNINGS:**

- READ WORK INSTRUCTIONS IN ENTIRETY BEFORE STARTING
- CHECK THAT YOU ARE PROPERLY CLEAR OF GAS TANK AND WIRES BEFORE DRILLING
- CONTACT ENGINEERING IF QUESTIONS ARISE OR DOCUMENT NEEDS TO BE UPDATED
- FOLLOW ALL LISTED OEM SYSTEM FUNCTIONALITY CHECKS AFTER INSTALL.

#### PART IDENTIFICATION / BOM:

•	2 <sup>nd</sup> Item Number	Description	Qty-UM
•	026892	LITERATURE RACK KIT 6-TIER	1-EA
•	RM520312	NUT HEX NYLOC 1/4-20 ZN GR2	4-EA
•	RM541013	WASH 1/4 ZN GR2	4-EA
•	RM511458	BLT HWHD 1/4-20X3/4 ZN GR5	4-EA

#### **TOOLS REQUIRED:**


- 7/16 Socket -Deep Well 3/8 dr.
- 7/16 Combination Wrench (6pt).
- Impact 3/8 dr. or Air Ratchet 3/8 dr.
- Drill w/ 17/64 (Screw Machine) Drill Bit

### **PROCESS:**

Note: The position of document holder may change depending on the customer.

- Four holes will be drilled on the partition for mounting of LITERATURE RACK KIT 6-TIER using template (customer specific). The position of document holder may vary from customer to customer. Check VPO/drawing before drilling holes.
- (4) BLT HWHD 1/4-20X3/4 ZN GR5, (4) WASH 1/4 ZN GR2 and (4) NUT HEX NYLOC 1/4-20 ZN GR2 will be used to assemble LITERATURE RACK KIT 6-TIER to the partition.
- LITERATURE RACK KIT 6-TIER will be assembled on driver side of the partition.



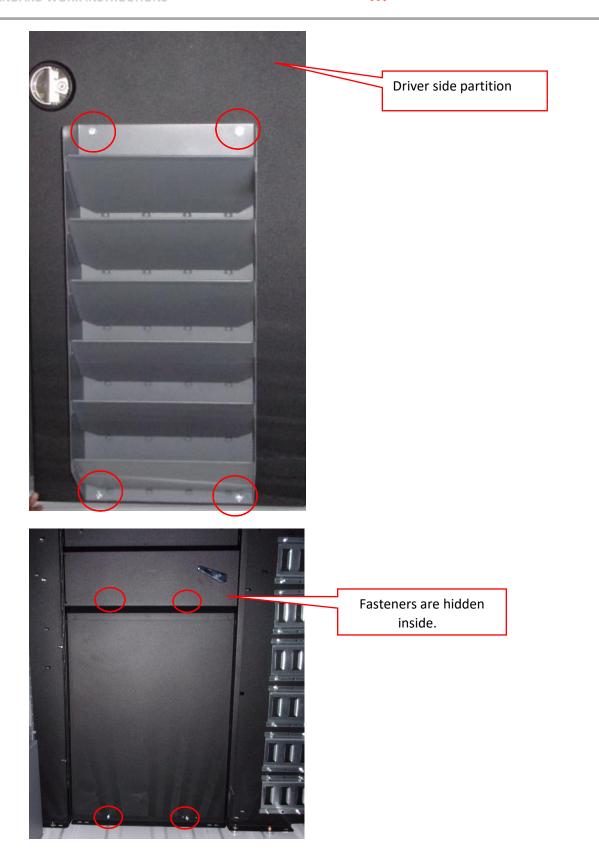



# **OEM SYSTEM FUNCTIONALITY TESTING:**

• <u>N/A</u>